

PICKitCommandline v6.21.30935.9084

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

PIC18F65K80	0x00006140	PIC18/PIC18F_K90_K80_K22	19	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65K40	0x00006800	PIC18/PIC18F_MSB1st	22	*	
PIC18F65K22	0x00005300	PIC18/PIC18F_K90_K80_K22	19	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65J94	0x00006400	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65J90	0x00003860	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65J50	0x00004100	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65J15	0x00001540	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65J11	0x00003960	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F65J10	0x00001520	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6585	0x00000A60	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6527	0x00001340	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6525	0x00000AE0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6520	0x00000B20	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F64J90	0x00003820	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F64J11	0x00003920	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6493	0x00000E00	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6490	0x000006A0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6410	0x000006E0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F63J90	0x00003800	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F63J11	0x00003900	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6393	0x00001A00	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6390	0x00000BA0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F6310	0x00000BE0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F57Q84	0x000009905	PIC18/PIC18F_MSB1st	22	*	
PIC18F57Q83	0x00000990B	PIC18/PIC18F_MSB1st	22	*	
PIC18F57Q43	0x000074C0	PIC18/PIC18F_MSB1st	22	*	
PIC18F57K42	0x00006B80	PIC18/PIC18F_MSB1st	22	*	
PIC18F56Q84	0x0000A302	PIC18/PIC18F_MSB1st	22	*	
PIC18F56Q83	0x0000A308	PIC18/PIC18F_MSB1st	22	*	
PIC18F56Q71	0x00007760	PIC18/PIC18F_MSB1st	22	*	
PIC18F56Q43	0x00007460	PIC18/PIC18F_MSB1st	22	*	
PIC18F56Q24	0x00007920	PIC18/PIC18F_MSB1st	22	*	
PIC18F56K42	0x00006BA0	PIC18/PIC18F_MSB1st	22	*	
PIC18F55Q71	0x00007860	PIC18/PIC18F_MSB1st	22	*	
PIC18F55Q43	0x00007400	PIC18/PIC18F_MSB1st	22	*	
PIC18F55Q24	0x00007960	PIC18/PIC18F_MSB1st	22	*	
PIC18F55K42	0x00006BC0	PIC18/PIC18F_MSB1st	22	*	
PIC18F54Q71	0x00007820	PIC18/PIC18F_MSB1st	22	*	
PIC18F47Q84	0x00009904	PIC18/PIC18F_MSB1st	22	*	
PIC18F47Q83	0x0000990A	PIC18/PIC18F_MSB1st	22	*	
PIC18F47Q43	0x000074A0	PIC18/PIC18F_MSB1st	22	*	
PIC18F47Q10	0x000070E0	PIC18/PIC18F_MSB1st	22	*	
PIC18F47K42	0x00006BE0	PIC18/PIC18F_MSB1st	22	*	
PIC18F47K40	0x00006900	PIC18/PIC18F_MSB1st	22	*	
PIC18F47J53	0x000058E0	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F47J13	0x000059E0	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F46Q84	0x0000A301	PIC18/PIC18F_MSB1st	22	*	
PIC18F46Q83	0x0000A307	PIC18/PIC18F_MSB1st	22	*	
PIC18F46Q71	0x00007720	PIC18/PIC18F_MSB1st	22	*	
PIC18F46Q43	0x00007440	PIC18/PIC18F_MSB1st	22	*	
PIC18F46Q24	0x00007900	PIC18/PIC18F_MSB1st	22	*	
PIC18F46Q10	0x00007120	PIC18/PIC18F_MSB1st	22	*	
PIC18F46K80	0x00006100	PIC18/PIC18F_K90_K80_K22	19	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F46K50	0x00005D00	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F46K42	0x00006C00	PIC18/PIC18F_MSB1st	22	*	
PIC18F46K40	0x00006920	PIC18/PIC18F_MSB1st	22	*	
PIC18F46K22	0x00005400	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F46K20	0x00002000	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F46J53	0x000058A0	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F46J50	0x00004CA0	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application

[illegible]

PIC18F27J53	0x00005860	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F27J13	0x00005960	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26Q84	0x0000A300	PIC18/PIC18F MSB1st	22	*	
PIC18F26Q83	0x0000A306	PIC18/PIC18F MSB1st	22	*	
PIC18F26Q71	0x000076E0	PIC18/PIC18F MSB1st	22	*	
PIC18F26Q43	0x00007420	PIC18/PIC18F MSB1st	22	*	
PIC18F26Q24	0x000078E0	PIC18/PIC18F MSB1st	22	*	
PIC18F26Q10	0x00007180	PIC18/PIC18F MSB1st	22	*	
PIC18F26K83	0x00006EC0	PIC18/PIC18F MSB1st	22	*	
PIC18F26K80	0x00006120	PIC18/PIC18F_K90_K80_K22	19	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26K50	0x00005D10	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26K42	0x00006C60	PIC18/PIC18F MSB1st	22	*	
PIC18F26K40	0x00006980	PIC18/PIC18F MSB1st	22	*	
PIC18F26K22	0x00005440	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26K20	0x00002020	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26J53	0x00005820	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26J50	0x00004C40	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26J13	0x00005920	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F26J11	0x00004DC0	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2685	0x00002720	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2682	0x00002700	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2680	0x00000EC0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2620	0x00000C80	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2610	0x00000CA0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25Q71	0x000076A0	PIC18/PIC18F MSB1st	22	*	
PIC18F25Q43	0x000073C0	PIC18/PIC18F MSB1st	22	*	
PIC18F25Q24	0x000078C0	PIC18/PIC18F MSB1st	22	*	
PIC18F25Q10	0x000071A0	PIC18/PIC18F MSB1st	22	*	
PIC18F25K83	0x00006EE0	PIC18/PIC18F MSB1st	22	*	
PIC18F25K80	0x00006180	PIC18/PIC18F_K90_K80_K22	19	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25K50	0x00005C20	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25K42	0x00006C80	PIC18/PIC18F MSB1st	22	*	
PIC18F25K40	0x000069A0	PIC18/PIC18F MSB1st	22	*	
PIC18F25K22	0x00005540	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25K20	0x00002060	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25J50	0x00004C20	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25J11	0x00004DA0	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F25J10	0x00001C00	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2585	0x00000EE0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2580	0x00001AC0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F258	0x00000840	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2553	0x00002A40	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2550	0x00001240	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2525	0x00000CC0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2523	0x00001110	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2520	0x00001100	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F252	0x00000400	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2515	0x00000CE0	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F2510	0x00001120	PIC18/PIC18F	3	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F24Q71	0x00007660	PIC18/PIC18F MSB1st	22	*	
PIC18F24Q24	0x000078A0	PIC18/PIC18F MSB1st	22	*	
PIC18F24Q10	0x000071C0	PIC18/PIC18F MSB1st	22	*	
PIC18F24K50	0x00005C60	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F24K42	0x00006CA0	PIC18/PIC18F MSB1st	22	*	
PIC18F24K40	0x000069C0	PIC18/PIC18F MSB1st	22	*	
PIC18F24K22	0x00005640	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F24K20	0x000020A0	PIC18/PIC18F_K_	6	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F24J50	0x00004C00	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F24J11	0x00004D80	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC18F24J10	0x00001D00	PIC18/PIC18F_J_	4	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application

PIC16LF1936	0x00002460	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1934	0x00002440	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1933	0x00002400	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF19197	0x000030A3	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19196	0x000030A1	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19195	0x0000309F	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19186	0x000030BD	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19185	0x000030BB	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19176	0x0000309D	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19175	0x0000309B	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19156	0x00003099	Midrange/1.8V Min MSB1st	21	*		
PIC16LF19155	0x00003097	Midrange/1.8V Min MSB1st	21	*		
PIC16LF1907	0x00002C40	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1906	0x00002C60	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1904	0x00002C80	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1903	0x00002C00	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1902	0x00002C20	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18877	0x00003077	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18876	0x00003073	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18875	0x0000306F	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18857	0x00003076	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18856	0x00003072	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18855	0x0000306E	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18854	0x0000306B	Midrange/1.8V Min MSB1st	21	*		
PIC16LF1847	0x000014A0	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18456	0x000030DA	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18455	0x000030D8	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18446	0x000030D5	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18445	0x000030D1	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18444	0x000030CF	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18426	0x000030D3	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18425	0x000030CD	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18424	0x000030CB	Midrange/1.8V Min MSB1st	21	*		
PIC16LF18346	0x000030A7	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18345	0x00003041	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18344	0x0000303D	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18326	0x000030A6	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18325	0x00003040	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18324	0x0000303C	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18323	0x00003069	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF18313	0x00003068	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1829	0x000028E0	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1828	0x000028C0	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1827	0x000028A0	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1826	0x00002880	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1825	0x00002860	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1824	0x00002840	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1823	0x00002820	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1789	0x0000302C	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1788	0x0000302D	Midrange/1.8v MinII	18	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1787	0x00002B20	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1786	0x00002B00	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1784	0x00002AE0	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16LF1783	0x00002AC0	Midrange/1.8V Min	14	*		Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application

[illegible]

[illegible]

[illegible]

[illegible]

PIC16F17146	0x000030E1	Midrange/1.8V Min MSB1st	21	*	
PIC16F17145	0x000030DF	Midrange/1.8V Min MSB1st	21	*	
PIC16F17144	0x000030DD	Midrange/1.8V Min MSB1st	21	*	
PIC16F1713	0x00003049	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F17126	0x000030E0	Midrange/1.8V Min MSB1st	21	*	
PIC16F17125	0x000030D2	Midrange/1.8V Min MSB1st	21	*	
PIC16F17124	0x000030DC	Midrange/1.8V Min MSB1st	21	*	
PIC16F17115	0x000030E2	Midrange/1.8V Min MSB1st	21	*	
PIC16F17114	0x000030DB	Midrange/1.8V Min MSB1st	21	*	
PIC16F1709	0x00003054	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1708	0x00003042	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1707	0x00003060	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1705	0x00003055	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1704	0x00003043	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1703	0x00003061	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1619	0x0000307D	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1618	0x00003079	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1615	0x0000307C	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1614	0x00003078	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1613	0x0000304C	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1579	0x00003003	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1578	0x00003002	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1575	0x00003001	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1574	0x00003000	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F15386	0x000030B8	Midrange/1.8V Min MSB1st	21	*	
PIC16F15385	0x000030B6	Midrange/1.8V Min MSB1st	21	*	
PIC16F15376	0x000030B4	Midrange/1.8V Min MSB1st	21	*	
PIC16F15375	0x000030B2	Midrange/1.8V Min MSB1st	21	*	
PIC16F15356	0x000030B0	Midrange/1.8V Min MSB1st	21	*	
PIC16F15355	0x000030AE	Midrange/1.8V Min MSB1st	21	*	
PIC16F15354	0x000030AC	Midrange/1.8V Min MSB1st	21	*	
PIC16F15345	0x000030C8	Midrange/1.8V Min MSB1st	21	*	
PIC16F15344	0x000030C4	Midrange/1.8V Min MSB1st	21	*	
PIC16F15325	0x000030C6	Midrange/1.8V Min MSB1st	21	*	
PIC16F15324	0x000030C2	Midrange/1.8V Min MSB1st	21	*	
PIC16F15323	0x000030C0	Midrange/1.8V Min MSB1st	21	*	
PIC16F15313	0x000030BE	Midrange/1.8V Min MSB1st	21	*	
PIC16F15276	0x000030EC	Midrange/1.8V Min MSB1st	21	*	
PIC16F15275	0x000030ED	Midrange/1.8V Min MSB1st	21	*	
PIC16F15274	0x000030EE	Midrange/1.8V Min MSB1st	21	*	
PIC16F1527	0x000015A0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1526	0x00001580	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F15256	0x000030EB	Midrange/1.8V Min MSB1st	21	*	
PIC16F15255	0x000030EF	Midrange/1.8V Min MSB1st	21	*	
PIC16F15254	0x000030F0	Midrange/1.8V Min MSB1st	21	*	
PIC16F15245	0x000030EA	Midrange/1.8V Min MSB1st	21	*	
PIC16F15244	0x000030E8	Midrange/1.8V Min MSB1st	21	*	
PIC16F15243	0x000030E5	Midrange/1.8V Min MSB1st	21	*	
PIC16F15225	0x000030E9	Midrange/1.8V Min MSB1st	21	*	
PIC16F15224	0x000030E7	Midrange/1.8V Min MSB1st	21	*	
PIC16F15223	0x000030E4	Midrange/1.8V Min MSB1st	21	*	
PIC16F15214	0x000030E6	Midrange/1.8V Min MSB1st	21	*	
PIC16F15213	0x000030E3	Midrange/1.8V Min MSB1st	21	*	
PIC16F1519	0x000016E0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1518	0x000016C0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1517	0x000016A0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1516	0x00001680	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1513	0x00001640	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1512	0x00001700	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1509	0x00002D40	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application

PIC16F1508	0x00002D20	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1507	0x00002D00	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1503	0x00002CE0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1459	0x00003023	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1455	0x00003021	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F1454	0x00003020	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16F13145	0x00003129	Midrange/1.8V Min MSB1st	21	*	
PIC16F13144	0x00003126	Midrange/1.8V Min MSB1st	21	*	
PIC16F13143	0x00003123	Midrange/1.8V Min MSB1st	21	*	
PIC16F13125	0x00003128	Midrange/1.8V Min MSB1st	21	*	
PIC16F13124	0x00003125	Midrange/1.8V Min MSB1st	21	*	
PIC16F13123	0x00003122	Midrange/1.8V Min MSB1st	21	*	
PIC16F13115	0x00003127	Midrange/1.8V Min MSB1st	21	*	
PIC16F13114	0x00003124	Midrange/1.8V Min MSB1st	21	*	
PIC16F13113	0x00003121	Midrange/1.8V Min MSB1st	21	*	
PIC16C84	0x00003FE0	Midrange/NoDeviceId	20	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC16C83	0x00003FE0	Midrange/NoDeviceId	20	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1840	0x00001BC0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1822	0x00002800	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1612	0x00003059	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1572	0x00003052	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1571	0x00003053	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1552	0x00002BC0	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12LF1501	0x00002D80	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12HV752	0x00001520	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12HV615	0x000021A0	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12HV609	0x00002280	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F752	0x00001500	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F683	0x00000460	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F675	0x00000FC0	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F635	0x00000FA0	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F629	0x00000F80	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F617	0x00001360	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F615	0x00002180	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F609	0x00002240	Midrange/Standard	0	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F519	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F510	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F509	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F508	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F1840	0x00001B80	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F1822	0x00002700	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F1612	0x00003058	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F1572	0x00003050	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F1571	0x00003051	Midrange/1.8v MinII	18	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC12F1501	0x00002CC0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10LF322	0x000029C0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10LF320	0x000029E0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F322	0x00002980	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F320	0x000029A0	Midrange/1.8V Min	14	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F222	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F220	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F206	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F204	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F202	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
PIC10F200	0x0000FFFF	Baseline	2	*	Supports Programmer to Go - PICKit2 Only with PICKitPlus GUI application
MCP25055	0xFFFFFFFF	Others/MCP250xx	17	*	
MCP25050	0xFFFFFFFF	Others/MCP250xx	17	*	
MCP25025	0xFFFFFFFF	Others/MCP250xx	17	*	
MCP25020	0xFFFFFFFF	Others/MCP250xx	17	*	
M25P80	0xFFFFFFFF	EEPROMS/25LC	11	*	

[illegible]

[illegible]

25LC256	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC160B	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC160A	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC128	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC1024	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC080B	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC080A	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC040A	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC020A	0xFFFFFFFF	EEPROMS/25LC	11	*
25LC010A	0xFFFFFFFF	EEPROMS/25LC	11	*
24xx64	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx512	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx32	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx256	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx16	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx128	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx1026	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx1025	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx08	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx04	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx02	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx01	0xFFFFFFFF	EEPROMS/24xx	10	*
24xx00	0xFFFFFFFF	EEPROMS/24xx	10	*
24LC32A	0xFFFFFFFF	EEPROMS/24xx	10	*
24LC16B	0xFFFFFFFF	EEPROMS/24xx	10	*
24LC08B	0xFFFFFFFF	EEPROMS/24xx	10	*
24LC04B	0xFFFFFFFF	EEPROMS/24xx	10	*
24LC02B	0xFFFFFFFF	EEPROMS/24xx	10	*
24LC01B	0xFFFFFFFF	EEPROMS/24xx	10	*
11LC160	0xFFFFFFFF	EEPROMS/11LC	15	*
11LC080	0xFFFFFFFF	EEPROMS/11LC	15	*
11LC040	0xFFFFFFFF	EEPROMS/11LC	15	*
11LC020	0xFFFFFFFF	EEPROMS/11LC	15	*
11LC010	0xFFFFFFFF	EEPROMS/11LC	15	*
+FL127S	0xFFFFFFFF	EEPROMS/25LC	11	*

* Supported by PKCMD, PKAutoWatch, PKGangProgrammer and PKCMD-LX.

All devices are supported by PICKit2Plus and PICKit3Plus applications.